

# MICROCAPSTAR

## End-Tidal CO<sub>2</sub> Analyzer

### Instruction Manual

Read instructions carefully before operating this device.

- ❶ *This device is not to be used for Human Life Support applications.*
- ❷ *To avoid possible electrical shock, do not operate this device if it is wet or has had liquids spilled onto it.*
- ❸ *Service or calibration procedures should only be performed by qualified personnel familiar with the electrical hazards of line-powered devices.*

## **CWE, Inc.**

124 Sibley Avenue  
Ardmore PA 19003 U.S.A.  
(610)642-7719 FAX (610)642-1532  
[www.cwe-inc.com](http://www.cwe-inc.com)

**STATEMENT OF WARRANTY**

IF THIS INSTRUMENT FAILS WITHIN A PERIOD OF ONE YEAR FROM THE DATE OF DELIVERY OR INSTALLATION, CWE, INC. WILL, AT ITS OPTION, REPAIR OR REPLACE IT FREE OF CHARGE TO THE PURCHASER. THIS WARRANTY EXCLUDES DAMAGE INCURRED THROUGH ABUSE OR ACCIDENT AND CONSUMABLE ITEMS OR COMPONENTS SUCH AS BATTERIES. CWE, INC. DOES NOT ASSUME ANY LIABILITY FOR ANY CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OR MISUSE OF THIS INSTRUMENT. THIS WARRANTY IS APPLICABLE ONLY TO THE ORIGINAL PURCHASER OF THE INSTRUMENT, AND IS NON-TRANSFERRABLE.

**IF YOU HAVE A PROBLEM**

Please call or write describing your problem. We can often identify what is wrong, and suggest a solution without recourse to returning the device. Defective units under warranty should be returned to the factory along with a note describing the nature of the fault. Every effort will be made to ensure prompt repair or replacement of the device.

**FACTORY SERVICE**

Out of warranty or damaged instruments may be returned to the factory postage prepaid for service at prevailing rates. Upon request, a written or verbal quotation for such service will be issued after examination of the unit but prior to commencing repairs or service. Address requests for service or technical information to:

CWE, Incorporated  
Technical Support Department  
124 Sibley Avenue, Ardmore, PA 19003 U.S.A.  
TEL (610)642-7719 FAX (610)642-1532

**LIFE SUPPORT POLICY**

Instruments manufactured by CWE, Incorporated are not authorized for use as critical components in human life support devices or systems. "Life support devices or systems", as used herein, are devices or systems whose failure to perform, whether through misuse, failure, or proper operation, can reasonably be expected to result in significant injury to the operator or subject persons.

## TABLE OF CONTENTS

TABLE OF CONTENTS.....	3
1.0 INTRODUCTION.....	4
<i>MICROCAPSTAR FRONT PANEL</i> .....	4
2.0 SPECIFICATIONS .....	4
2.0 SPECIFICATIONS .....	5
3.0 SETTING UP THE MICROCAPSTAR.....	6
4.0 OPERATION.....	7
4.1 CALIBRATION.....	7
4.2 MONITOR DISPLAY AND SETTINGS .....	7
4.3 END-TIDAL OR FAST CO <sub>2</sub> DISPLAY SWITCH .....	8
4.4 MMHG / PERCENT SWITCH.....	8
4.5 CO <sub>2</sub> ALARM ON / OFF SWITCH .....	8
4.6 INDICATOR LED'S.....	8
4.7 SETTING AND USING THE ETCO <sub>2</sub> ALARM.....	9
4.8 SETTING THE SAMPLE FLOW RATE .....	9
4.9 ANALOG OUTPUT SIGNALS (REAR PANEL).....	9
4.10 RS232 OUTPUT (REAR PANEL) .....	10
5.0 MAINTENANCE.....	10
5.1 ERROR MESSAGES .....	10
6.0 ORDERING INFORMATION.....	11
MICROCAPSTAR QUICK START GUIDE.....	12

## 1.0 INTRODUCTION

The MicroCapStar is a high-performance, micro-sampling, respiratory gas analyzer for monitoring the expired carbon dioxide gas concentration and respiratory rate of small animals, including mice. CO<sub>2</sub> is measured using a temperature-controlled, infrared optical bench, which features fast response, excellent accuracy, and long-term stability. Respiratory rate is computed on a breath-by-breath basis from the CO<sub>2</sub> excursions. The unit is completely self contained: the sensors, control electronics, displays, and sampling pumps are housed in a rack-mountable enclosure.

The low sample flow is made possible through the use of a unique carrier flow sample system. This employs actively controlled positive (carrier) and negative (sample) flows, allowing the gas sample to be rapidly transported to the measurement cell. The flows are automatically and continuously adjusted to compensate for different sample tubing setups and measurement conditions.

A front-panel graphics LCD panel shows CO<sub>2</sub> concentration (percent or mmHg) as either the instantaneous value, or the end-tidal value. Analog outputs provide a linear voltage corresponding to the current gas concentration and respiratory rate. An RS232 serial output is provided for connection to an external computer, whereby data can be independently collected and analyzed.

The MicroCapStar has built-in audible and visual alarms for detecting out-of-range end-tidal CO<sub>2</sub> and other alarm conditions. The CO<sub>2</sub> alarm range and the calibration settings are stored in non-volatile memory and automatically reinstated when the instrument is next used.



*MicroCapStar Front Panel*

## 2.0 SPECIFICATIONS

Carbon dioxide measurement.....	single beam infrared
Measurement range.....	0 - 9.9% (0 – 76.0mmHg) CO <sub>2</sub>
Accuracy .....	0.15% (1.1mmHg)
Resolution (internal and analog output) .....	0.01% (0.1mmHg)
Resolution (display) .....	0.1% (1.0mmHg)
Linearity .....	0.1% CO <sub>2</sub>
Repeatability.....	0.1% CO <sub>2</sub>
Response time (T <sub>10</sub> - T <sub>90</sub> ).....	75mS at 70 ml/min through cell
Sample cell materials.....	sapphire and stainless steel
Analog output scaling .....	1.1V/% (0-10V)
Zero stability .....	0.2% (8 hours), 0.3% (24 hours)
Interference effects: 50% N <sub>2</sub> O .....	0.1% at 0% CO <sub>2</sub> , 0.6% at 5% CO <sub>2</sub> (uncomp.)
Maximum sample cell pressure.....	± 5 psig
Interference effects: vaporized anaesthetic agents.....	negligible
Operating temperature range.....	5-40° C
Optical bench temperature .....	48° C, controlled
Warm-up time.....	4 min to 0.2%, 10 min to 0.1%
ETCO <sub>2</sub> trend display .....	5 minute graphical scrolling display
Sample flow .....	9ml/min nominal, adjustable 5 – 20 ml/min
Sample tubing connections (carrier flow, sample inlet) .....	Luer female
Standard sample tubing set .....	0.030" (0.76mm) ID X 39" (1m) long
Calibration controls .....	Zero, Span
ETCO <sub>2</sub> alarm adjustment range .....	1.0 – 9.9% (8 – 75mmHg)
Respiratory rate measurement range .....	5 – 200 breaths/min
Signal outputs (rear panel) .....	BNC jacks
CO <sub>2</sub> output scaling .....	1.0V / %CO <sub>2</sub>
Respiratory rate output scaling .....	0.05V / bpm
Alarm output .....	5V if alarm condition, 0V if no alarm
Serial data output format .....	2400 baud, 8 data, no parity, 1 stop bit
Electrical requirements .....	120VAC/220VAC switchable, 35VA
Dimensions (main unit) .....	19W x 5.25H x 16D in., 49W x 13H x 41D cm
Weight.....	10 lbs. (4.5kg)

### 3.0 SETTING UP THE MICROCAPSTAR

- ❶ Place the MICROCAPSTAR control unit in a stable location close to the subject or animal being monitored. Note that the output signals are on the rear panel.
- ❷ Be sure the **VOLTAGE SELECTOR** switch on the rear panel is set correctly. Plug the included power cord into the receptacle on the rear panel, and the other end into a grounded AC outlet.
- ❸ Attach the sample tubing set to the front panel **SAMPLE INLET** and **CARRIER OUTLET** Luer connectors. Be sure the miniature hydrophobic filter is installed at the **SAMPLE INLET** connection. This filter is the final line of defense that prevents water or particulates from entering the infrared CO<sub>2</sub> sample cell.
- ❹ Switch **POWER** on. The front-panel display should come on, showing a “welcome” message, indicating that the unit is receiving power and operating. The sensors and flow controls will take about five minutes to warm up and stabilize.
- ❺ The distal end of the sample tubing set has a miniature “Y” connector. This should be connected as closely as possible to the endotracheal tube connection to insure a good end-tidal sample. Various tubing adapters are provided for making this connection.
- ❻ See the remainder of this manual for the various operating modes and controls.

## 4.0 OPERATION


### 4.1 CALIBRATION

The CO<sub>2</sub> sensor used in the MicroCapStar is highly linear, so a two-point calibration is all that is required.

**Zero adjust:** With the sample tubing set open to room air, press the **CAL HIGH / CAL LOW** rocker switch to the **CAL LOW** position and hold it there. Rotate the **SET** knob until the reading shows 0.0% or alternates between 0.0 and 0.1%. Note that the display stops at 0.0%, but negative readings are indicated by a flashing “-“ sign to the left of the CO<sub>2</sub> reading.

**Span adjust:** With the sample tubing set sampling 5.0% CO<sub>2</sub>, press the **CAL HIGH / CAL LOW** rocker switch to the **CAL HIGH** position and hold it there. Adjust the **SET** knob until the calibration gas value is displayed ( $\pm 0.1\%$ ). Other CO<sub>2</sub> calibration gasses can be used within the range 5.0 – 9.0%. Calibration can be performed in either percent or mmHg display mode.

### 4.2 MONITOR DISPLAY AND SETTINGS

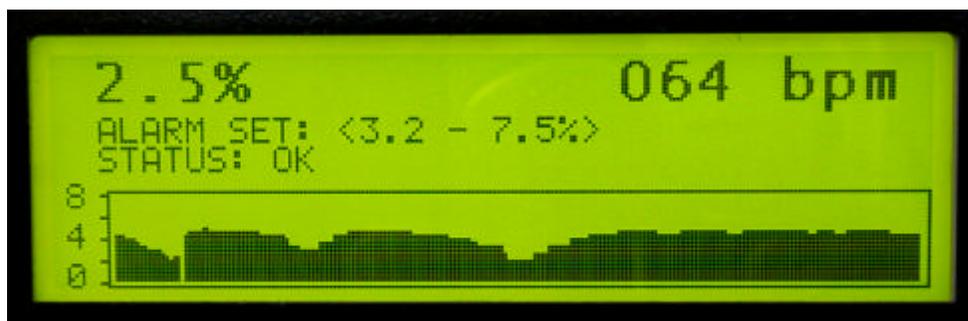

*MicroCapStar LCD display panel*

The front-panel LCD panel shows the current measurements, the settings and state of the programmable alarm, operator messages, and a graphical trend display of the ETCO<sub>2</sub> concentration. The principal measurements, CO<sub>2</sub> and respiratory rate, are displayed at the top of the display, for example:

**4.9% 123 bpm, or 37mm 123 bpm.**

The second line shows ETCO<sub>2</sub> alarm band settings in either percent or mmHg, depending on the setting of the **MMHG / PERCENT** switch.

The third line shows error or alarm messages and/or system status.

At the bottom of the display is a scrolling bar graph showing ETCO<sub>2</sub>. This trend display shows the last five minutes of monitoring, and serves as an indicator of rising or falling CO<sub>2</sub> values. The range of this display is 0 – 8.0% (0 – 60 mmHg).

### **4.3 END-TIDAL OR FAST CO<sub>2</sub> DISPLAY SWITCH**

The LCD display on the MICROCAPSTAR can report CO<sub>2</sub> concentration in either a continuous reading (**FAST**), or as the peak expired value (**END TIDAL**), depending on the setting of this switch.

Note that the **CO<sub>2</sub> OUTPUT** (rear panel) always provides the fast response signal.

### **4.4 mmHg / PERCENT SWITCH**

This switch selects the display more as either percent CO<sub>2</sub> concentration, or as partial pressure in mmHg.

### **4.5 CO<sub>2</sub> ALARM ON / OFF SWITCH**

When switched on, an alarm will sound if the monitored ETCO<sub>2</sub> falls outside of the alarm band range. The **ERROR LED** will also flash to indicate this alarm condition.

### **4.6 INDICATOR LED'S**

**Sensor Not Ready:** This LED will be illuminated while the CO<sub>2</sub> sensor is warming up.

**Check Sample Flow:** This LED will flash if the sample flow is obstructed or otherwise out of range.

**Error:** This LED will flash if an error or alarm condition is encountered. The LCD panel will provide a description of the condition.

#### 4.7 SETTING AND USING THE ETCO<sub>2</sub> ALARM

This MicroCapStar provides a user-selectable alarm for ETCO<sub>2</sub>. When this alarm is turned on, and an out of range ETCO<sub>2</sub> measurement is encountered, an alarm will sound and the **ERROR** LED will flash.

To set the alarm range, move and hold the **CO<sub>2</sub> ALARM HIGH / LOW** switch to either the **HIGH** (up) or **LOW** (down) position, and hold it there while turning the **SET** knob. The alarm setting selected will change on the display, e.g.: **<3.5 - 6.0%>**, or **<26 - 46 mm>**

#### 4.8 SETTING THE SAMPLE FLOW RATE

This sample flow rate can be adjusted over the range of approximately 5 – 20 ml/min. The factory setting is approximately 7.5 ml/min, which has been found suitable for both mice and rats, but lower settings may be desirable with very small animals.

To adjust the sample flow, hold the **CAL** switch in the **HIGH** position, and momentarily press the **SET** knob. The display will show:

**STATUS: Flow 350U 07.4cc**

Rotate the **SET** knob until the desired flow rate in cc/min is indicated, and press the set knob to exit.

**Note: If the sample flow rate is changed, the instrument must be re-calibrated before accurate readings can be obtained.**

#### 4.9 ANALOG OUTPUT SIGNALS (Rear Panel)

Analog outputs are provided for CO<sub>2</sub> concentration, respiratory rate, and the alarm status. These signals are scaled as follows:

**CO<sub>2</sub> output:** 1.0V / %CO<sub>2</sub>

**Respiratory rate:** 0.05V / bpm

**Alarm status:** 5V if alarm, 0V if no alarm

#### 4.10 RS232 OUTPUT (Rear Panel)

A serial interface is provided for external data collection and analysis. Two formats are available, which are selected by the **SERIAL FORMAT SWITCH** (rear panel). A sample of each is shown:

<b>FORMAT 1</b>	ETCO <sub>2</sub> , rate	once each breath
<b>FORMAT 2</b>	ETCO <sub>2</sub> , rate	every 10 seconds

These numbers are sent as simple ASCII characters, separated by commas, and each data set ends with a <cr> character (ASCII 13), e.g. 5.41,149<cr> (ETCO<sub>2</sub> = 5.41%, rate = 149 bpm). This format allows for easy importation into spreadsheets or other analysis software.

The protocol used is 2400,N,8,1 which is almost universally available using any terminal program ( e.g., Windows HyperTerminal).

### 5.0 MAINTENANCE

The MicroCapStar monitor requires no routine maintenance, other than periodically replacing the in-line hydrophobic filter. This filter is inserted in the **SAMPLE INLET** port on the front panel of the instrument. These filters are included in the Accessories Kit included with the instrument, and are available separately from CWE, Inc.

**CAUTION!** NEVER OPERATE THE INSTRUMENT WITHOUT THIS IN-LINE FILTER. THIS FILTER PREVENTS LIQUIDS AND OTHER FOREIGN MATTER FROM ENTERING THE SAMPLE CELL.

#### 5.1 ERROR MESSAGES

**Sensors not ready:** This is a normal message during the warmup period. If this appears after the instrument is fully warmed up, factory servicing is required.

**CO<sub>2</sub> Alarm!:** This indicates the current ETCO<sub>2</sub> reading is outside the range of the alarm band.

**Check sample flow:** This indicates the sample flow rate is not within operating limits. The cause may be a clogged hydrophobic

filter. If this message continues to appear after replacement of this filter, the sample tubing set may be blocked or kinked.

**OK:** This is the normal status display, and indicates there are no operational problems with the instrument.

## **6.0 ORDERING INFORMATION**

Accessories and replacement parts for the MICROCAPSTAR are available from CWE, Inc. The following table describes these items and gives the Part Numbers.

<b>PART No.</b>	<b>DESCRIPTION</b>
=====	=====
15-10000	MICROCAPSTAR CO <sub>2</sub> Analyzer, with sample set & accessories
15-00100	Sample tubing set, 1m
15-00110	Sample tubing set, 2m
11-01108	In-line miniature hydrophobic filter, 13mm dia, Luer fittings, pk of 5
11-01110	Calibration gas, 4 liter aerosol can, 5% CO <sub>2</sub> , 20% O <sub>2</sub> , balance N <sub>2</sub>
11-02000	Replacement sample air pump

## MicroCapStar Quick Start Guide

### Setup:

Connect the MicroCapStar sample tubing set using the attached diagram as a guide. Note the shaded areas on the diagram, which represent the tubing volume that should be minimized. Other connections are less critical, and can be adjusted according to your particular setup.

Try to make the connection between the distal "Y" connector and the other tracheal tube connections easily detachable for calibration purposes.

### Startup:

Turn on the MicroCapStar. The display will show some startup messages, and then will indicate that it is waiting for the flow zeros to stabilize. This process will take about two minutes.

After this initial period, the sample pumps will come on, and the sample flow system will stabilize. The **SENSOR NOT READY** light will stay on while the infrared CO<sub>2</sub> sensor warms up.

It is recommended that the unit be running for at least 1/2 hour before initial measurements, to allow time for the CO<sub>2</sub> sensor to fully stabilize.

### Calibration:

After the instrument has warmed up, adjust the **ZERO** and **SPAN** calibrations.

#### ZERO adjustment:

For the **ZERO** calibration, open the distal "Y" connector to room air. Hold the **CAL** switch in the **CAL LOW** position, and rotate the adjustment knob until the display reads 0.0% (00.0mm). Note that a minus sign (-) will appear if the reading is below zero.

#### SPAN adjustment:

For the **SPAN** calibration, apply a 5% CO<sub>2</sub> calibration gas to the "Y" connector. Hold the **CAL** switch in the **CAL HI** position, and rotate the adjustment knob until the display reads 5.0% (00.0mm).

After this initial calibration, it will be only necessary to check the **ZERO** setting after several hours of use.

