














Registering the Camera with Windows

Windows

If you have already installed or updated the device drivers for your camera, click [here](#)  to return to the previous view.

Instructions for installing or updating device drivers are divided according to camera type and the operating system used. You will be returned to the *Nikon View 4 Reference Manual* after reading the instructions for your camera and operating system.

Camera	Operating system
COOLPIX5000 COOLPIX995 COOLPIX885 COOLPIX775	 Windows Millennium Edition (Me)
	 Windows 98/98 Second Edition (SE)
	 Windows 2000 Professional
	 Windows Millennium Edition (Me)
COOLPIX990 COOLPIX880	 Windows 98/98 Second Edition (SE)
	 Windows 2000 Professional
	 Windows Millennium Edition (Me)
Nikon D1 Nikon D1x Nikon D1H	 Windows 98 Second Edition (SE)
	 Windows 2000 Professional
	 Windows Millennium Edition (Me)
D1 (driver update for those who are using the camera with existing copies of Nikon View DX or Nikon Capture)	 Windows 98 Second Edition (SE)
	 Windows 2000 Professional